

Breckenridge Cupholder Control Manual YP-MCP27-BB-D-HM15-01



Activation:

The cupholder control panel is activated when plugged into a power source.



The red light will turn on, indicating power has reached the control panel, and then turn off after 3 seconds.



Cup Holder / Phone Charge Station Button:



To activate the Phone Charging Station:

- Touch the lift button to raise the cup holder base. You do not need to hold the button.
- When the cup holder base is raised, the lamp inside the cupholder will turn off automatically.

- When the base elevates and aligns with the control panel, it is ready to function as a phone charging station.
- The indicator light on the base will turn blue to signal that the phone is charging.

To use it as a Cup Holder:

- Touch the button to lower the cup holder base. You do not need to hold the button.
- When the base reaches the bottom of the cupholder, the lamp inside the cup automatically lights up.
- When in the cup holder mode, please ensure the weight of the items is below 16oz (450 grams) to prevent overstraining and damaging the lift motor.

Note: Do not interrupt the rising or falling operation while the cup holder is moving.



Light Control Button:



To turn the light on/off inside the cupholder:

- Touch the light button to turn the light on and off.

Note: The external light around the cupholder and the light inside the cupholder will automatically turn off one hour after no operation.



Locking Button:



To lock/unlock the control panel:

- Hold the lock button for 3 seconds to lock/unlock the control panel.
- **Auto-Lock:** If there is no operation of the control panel for 4 minutes, it will automatically lock. Touch the lock button again to unlock the panel.



Memory Buttons:



To Activate position memory function:

- Move the upholstery to the desired position, then press and hold the memory button for 3 seconds (panel light flashes) to enable the memory function.

Note: There is no factory pre-set memory position. The user must initially set a desired position; otherwise, the memory function will not be activated.




Reset Button:



To reset and move back to the HOME position:

- Touch the reset button to return all upholstery to the closed position.

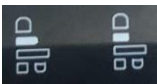

Headrest Open and Close Button



To open/close the headrest:

- To open the headrest, press the left button.
- To close the headrest, press the right button.



Footrest Open and Close Button



To open/close the footrest:

- To open the footrest, press the left button.
- To close the footrest, press the right button.

Product Specifications:

- The device requires a direct current (DC) input of 29 volts to operate properly.
- The Wireless Charging supports wireless charging with a maximum output power of 10 watts.

Safety and Precautions:

- The device requires a 29V 2A power supply. To minimize safety risks, please verify the power specifications before connecting the power supply.
- This product is touch sensitive. To prevent unintended operations, please avoid placing any items on the control pad.
- This product is a fine precision electromechanical component. Please avoid severe impacts or knockings during installation, usage, and transportation.
- If you notice abnormal heating, surface cracking, or other irregularities while using this product, immediately disconnect the power and cease use. Contact a professional for repair or replacement.