


ASSEMBLY INSTRUCTIONS B1334-110,B1334-120,B1334-330 BLUE RIDGE EASTERN KING BED

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the parts list and / or hardware list as shown below.

MODEL: B1334-110/120/330 EASTERN KING BED

(B1334-110) BOX OF HEADBOARD

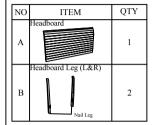

(B1334-120) BOX OF FOOTBOARD

NO	ITEM	QTY
С	Footboard	1
D	Slat	4
Е	Slat support	8

(B1334-330) BOX OF SIDE RAIL

NO	ITEM	QTY
F	Side Rail	2

(B1334-110) HARDWARE LIST


NO	ITEM	QTY
1	JCBC BOLT M6 x 40MM	4 PCS
2	JCBC BOLT M6 x 80MM	2 PCS
3	SPRING WASHER 1/4" RBW	4 PCS
4	FLAT WASHER 1/4" ID x 19mmOD BLK	4 PCS
5	WOOD DOWEL 10mmx30mm	2 PCS
6	ALLEN KEY M4 x 110MM	1 PCS


(B1334-120) HARDWARE LIST

NO	ITEM	QTY
7	CSK SCREW M4 x 32MM RBW	8 PCS


STEP 1-1: Insert DOWELS (5) into HEADBOARD (A), as shown, and slide HB PANEL (A) to HB LEG (B). Tighten with JCBC BOLT (1), SPRING WASHER (3) & FLAT WASHER (4), using ALLEN KEY (6),

STEP 1-2: Screw JCBC BOLT (2) into pre-drilled hole on headboard leg (B) and tighten, using ALLEN KEY (6) as shown.

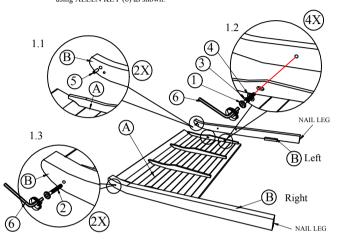

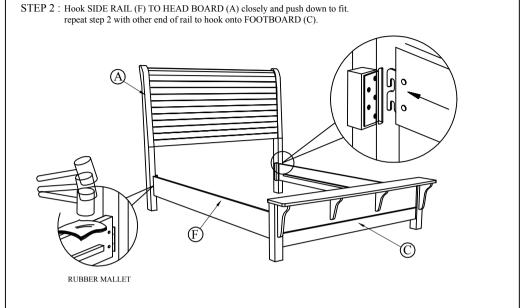

STEP 3: Fix the Bed Slats Support (E) to Bed Slats (D) as Shown and fix the Bed Slats to Side Rail (F) by using Flat Head Chipboard Screw (7). Loosen or Tighten the Adjuster as necessary to level the bed. Bed assembly should be done in final location to ensure stability.

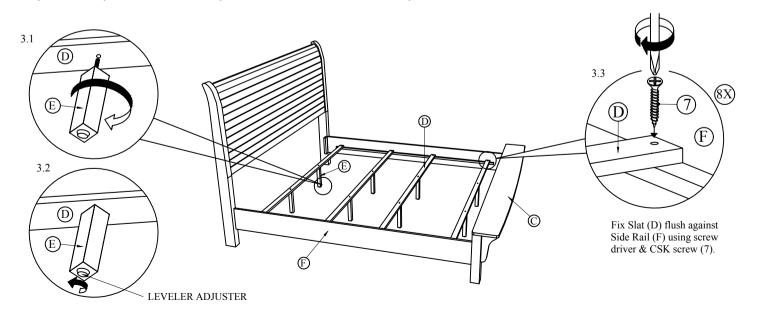

NOTE: MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.