

ASSEMBLY INSTRUCTIONS

B1655-070 OBSIDIAN CHEST

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the parts list and/or hardware list shown.


PARTS LIST

NO	COMPONENT	DRAWING	QTY
A	Chest	ENTE	1 pc
В	Bun Foot		4 pcs

HARDWARE LIST

NO	COMPONENT	DRAWING	QTY
1	JCBC M6 x 2" Blk	0	4 pcs
2	Spring Washer 1/4" Blk	0	4 pcs
3	Flat Washer 1/4"IDx6/8"OD Blk	0	4 pcs
4	Allen Key M4 x 2 9/16" Blk		1 pc

STEP 1: Pull the drawer and take out the Bunfoot carton (B). Attach the Bunfoot (B) at the bottom Night Stand (A) used JCBC (1) with Spring Washer (2) Flat Washer (3) and tighten with Allen Key (4).

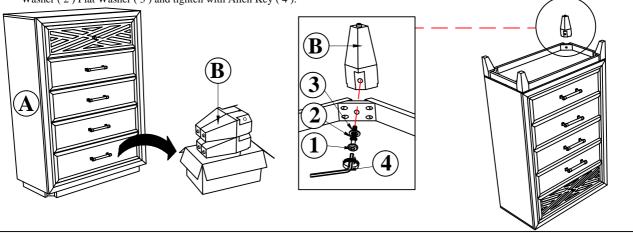

STEP 2: COMPLETE



 $\underline{\textit{COMPLETED ASSEMBLY}}$